



UPGRADE MainControl FW

1. Power off the camera, dial the SW1 to OFF, SW2 to OFF, and leave the rest alone.
2. Connect the camera and computer by a RS232 cable.
3. Run the software ARM-upgrading tool;
4. Set the computer COM number (here we are using COM7, you need to set it according to your computer), baud rate set to 115200 , select the firmware (xxxx_MainBoard_MainControl_ARM_xxxx.hex) which needs to burn, as bellow;

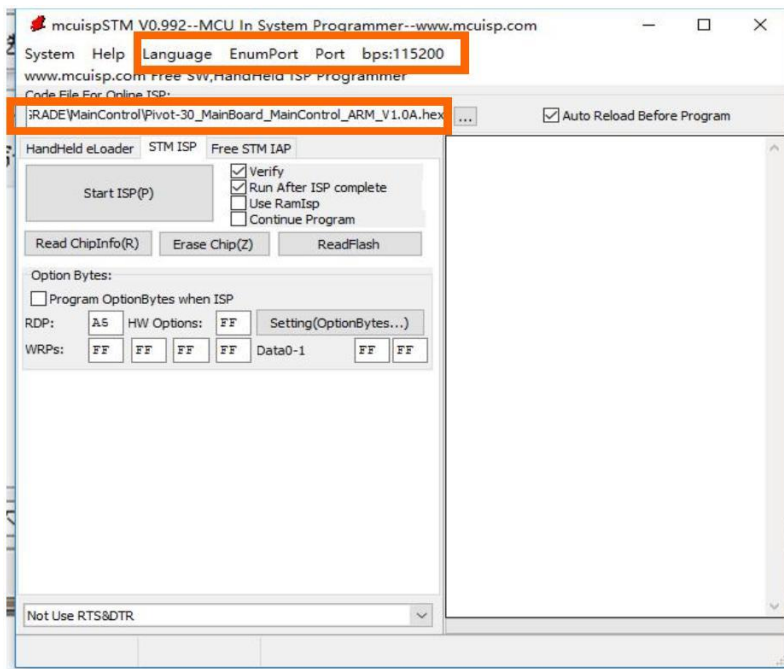

5. Click the Start Program button to start the burning, as picture :

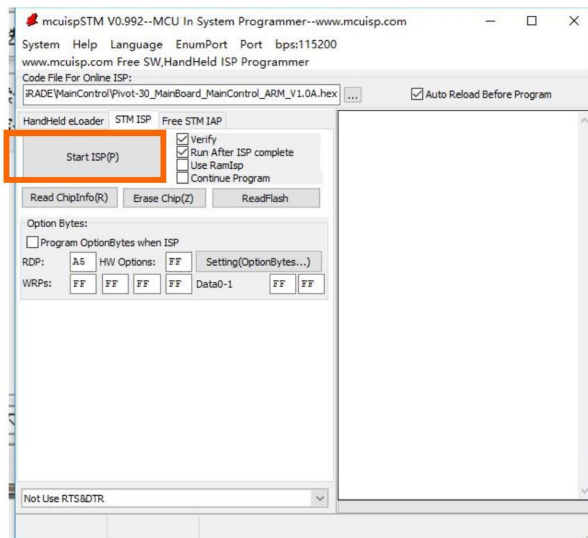

6. Power on the camera ;
7. Wait for the programming completed, you will see the tip at the lower right corner,
8. Power off after the upgrading finished, then dial the SW1&SW2 back to ON position;
9. Re -power on the camera, to run the camera with new ARM.
10. Please repower again to have a try.